


RepliCase Hip™ Cement Spacer Mold

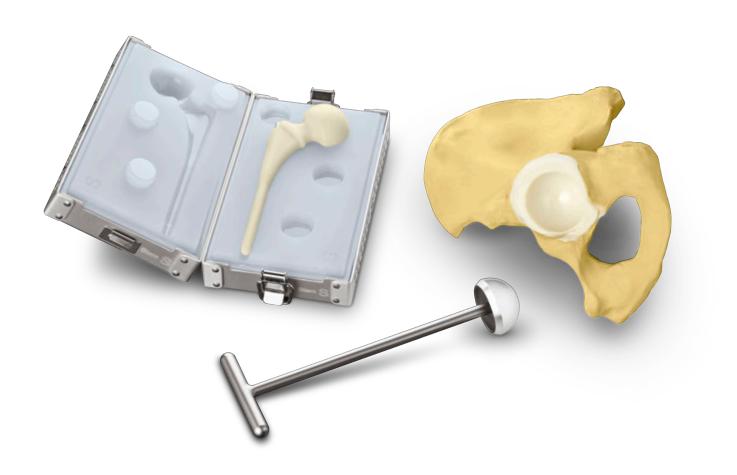

Surgical Technique Guide

Table of Contents

Device Description

RepliCase Hip -

The RepliCase Hip is used for molding a temporary hip prosthesis during surgery, and is intended to allow surgeons to model a temporary hip prosthesis in a simpler way.

INDICATIONS


The device is indicated for use to mold a temporary hip prosthesis for skeletally mature patients with the following conditions:

- 1. The first stage of temporary implantation of infected skeletally mature patients who need to undergo a two-stage total hip revision procedure.
- 2. Compliant patients who will consistently use traditional mobility assist device (e.g. crutches, walkers) throughout the implant period.
- 3. The molded temporary hip prosthesis is intended for an implantation period of 180 days or less.

Please refer to the package inserts for important product information, including, but not limited to contraindications, warnings, precautions, and adverse effects.




Product Overview

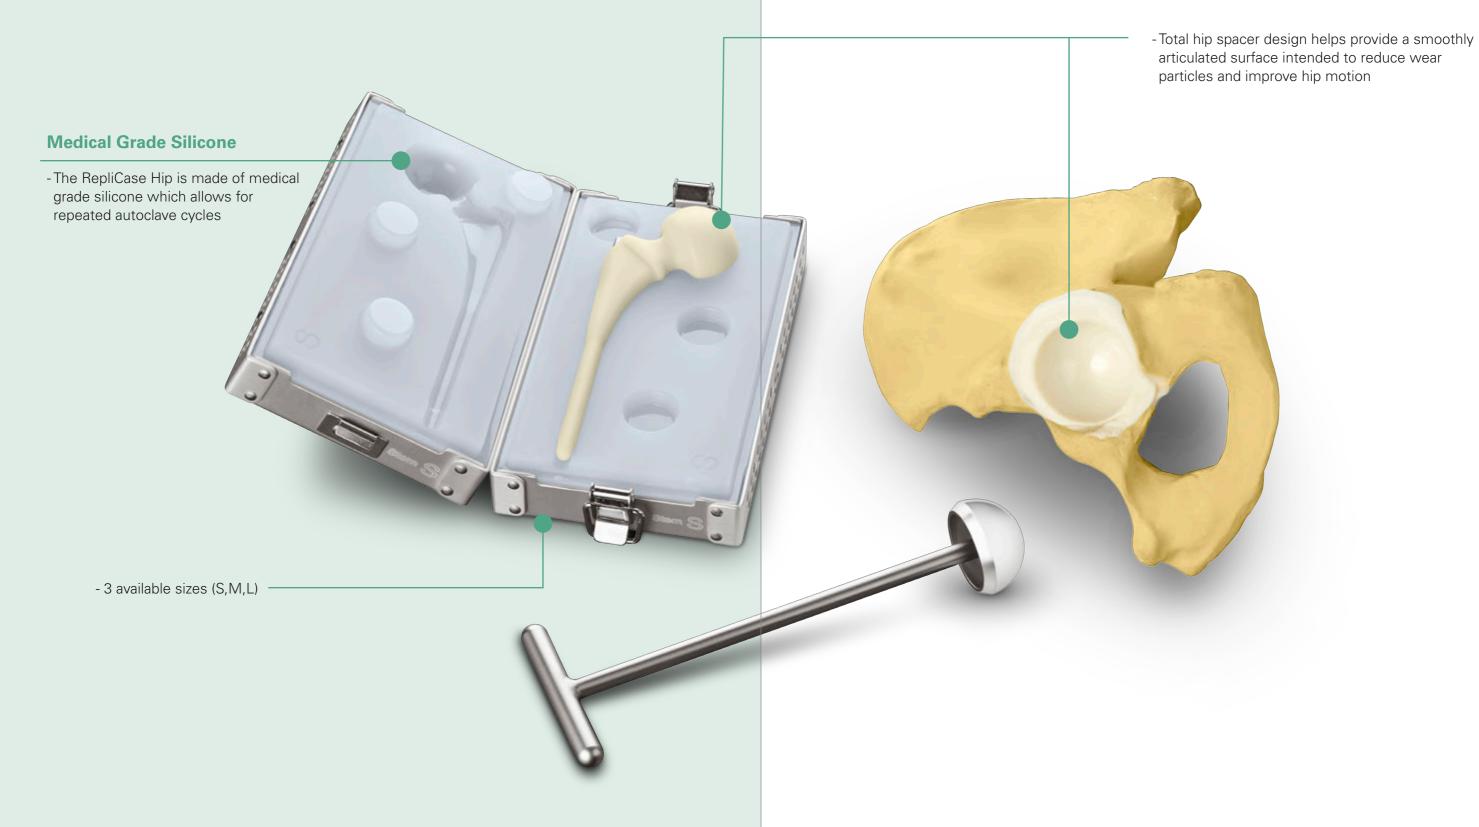

IV V


Surgical Overview

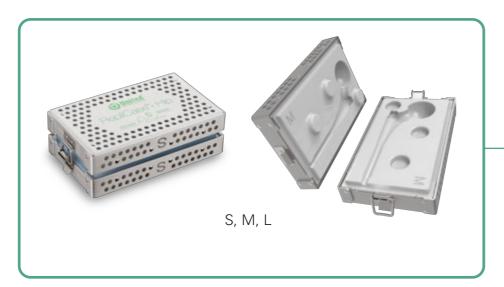


A. Size Selection




B. Bone Cement Preparation

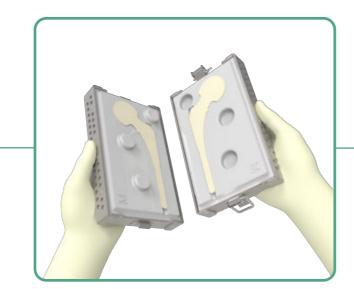

C. Femoral Cement Spacer Shaping

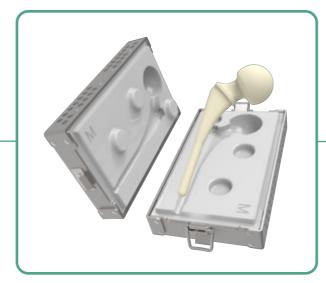

D. Femoral Cement Spacer Materialization

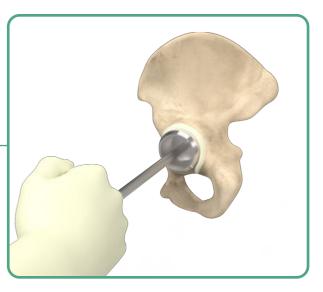

E. Acetabular Spacer Cup Preparation

VI VII

A. Size Selection

Measure the acetabular size and choose the proper size of **Cement Spacer Mold**.

	Hemiarthroplasty		Total Hip Type		
Measured Acetabular sizes (mm)	44	46, 48	50, 52	54	56 or above
Cup Diameter (mm)	_	_	46	49	52
Spacer Cup Cement Mantle (each side)	_	_	2 or 3 mm	2.5 mm	2 mm or above
Head Diameter (mm)	42	45	42	45	48
Suggested sizes	S	М	S	М	L

☑ Note:

For acetabular sizes under 50 mm, the acetabular spacer cup may not be necessary, size selection should be based on the head diameter.

B. Bone Cement Preparation

Prepare 80 to 120g of bone cement for a femoral spacer.




C.Femoral Cement Spacer Shaping

Fill the **Cement Spacer Mold** when bone cement is in the doughy stage.



D. Femoral Cement Spacer Materialization

Close and secure the lid of the mold and wait until bone cement is thoroughly hardened. Remove spacer from silicone mold and trim the excess cement around the spacer.

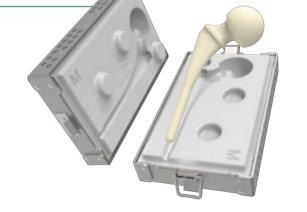

Instruments




Cement Spacer Mold

E. Acetabular Spacer Cup Preparation

Prepare additional one bone cement for acetabular spacer cup.

When cement is in the doughy stage, finger tap the cement into acetabulum. Connect **Acetabular Cup Molder** to the **Handle** and shape the cement to form spacer cup.

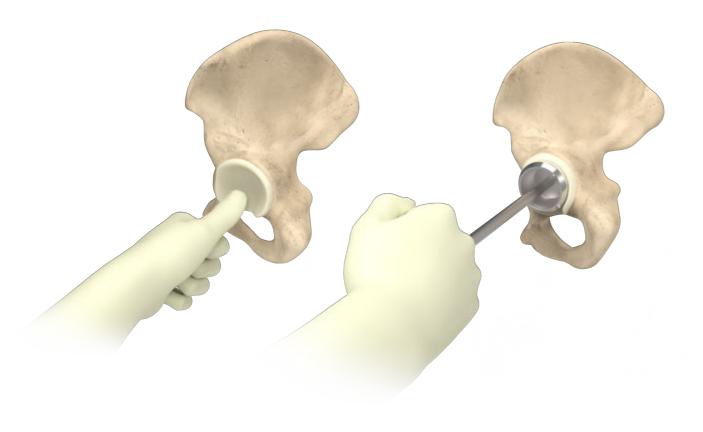

Instruments





Acetabular Cup Molder


Acetabular Cup Molder Handle





Order Information

	Catalog Number	
5	9909 - 5009 9909 - 5010 9909 - 5011	Cement Spacer Mold S, 42 mm Cement Spacer Mold M, 45 mm Cement Spacer Mold L, 48 mm
	9909 - 8110 - RA	Replicase Cement Mold Case
	9909 - 1101	Acetabular Cup Molder Handle
	9909 - 5046 9909 - 5049 9909 - 5052	Acetabular Cup Molder, 46 mm Acetabular Cup Molder, 49 mm Acetabular Cup Molder, 52 mm

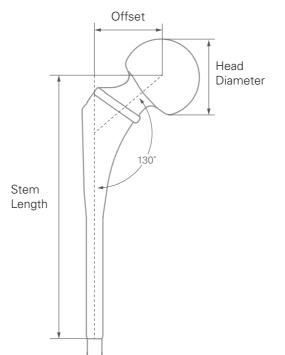

Dimensions

Size	s	М	L
Acetabular Size	50, 52	54	56 or above
Spacer Cup I.D.	46	49	52
Head Diameter	42	45	48
Offset	36	39	43
Head Neck Angle	130°	130°	130°
Stem Length	145	145	145
Distal Diameter	9	10	11

Unit : mn

Distal Diameter



Spacer Cup I.D.

Please note that this Surgical Technique Guide has been authored in the English language. Any translations into other languages have not been reviewed or approved by United Orthopedic Corporation and their accuracy cannot be confirmed. Any translated guide should be reviewed carefully prior to use and questions regarding a Surgical Technique Guide should be directed to United Orthopedic Corporation at unitedorthopedic.com/contact





